



Daily Cleaning

- Immerse each pouring spout in a cup of hot water for 5 seconds.



- Clean each nozzle with a brush.



- Wipe away any spillage in the front chamber. The black plastic tray may be removed for cleaning.



- Wipe the stainless steel body of the dispenser with a microfiber cloth (with the grain).







Sanitation Deep Cleaning



1: Insert the **TECHNICAL card** inside the reader




2: Scroll down  and SELECT  and confirm. Select **Sanitation** and confirm.




3: Press the **left icon**  and **remove the wine bottle**



4: **Place the cleaning bottle** filled with hot water and citric acid (4 Tablespoons or 2 oz) on the lifter and Press the **left icon** 



5: **Place an empty container** under the spout and press the **middle button** 



6: Use the **Brush** provided to clean the nozzle, **Repeat step 5** until the bottle is empty.



7: Press the **right button**  to confirm the sanitation process and **remove your cleaning bottle.**



8: **Place your wine bottle** on the lifter, Scroll down,  Select **Back** and Scroll down again to **Move Bottle.** **Remove the TECHNICAL Card.**

Don't forget to record the information in the cleaning chart provided!



Water Cleaning



1: Insert the **TECHNICAL** card inside the reader.



2: Scroll down using  and SELECT **Maintenance** and confirm. Select  **Cleaning** and confirm.



3: Press the **left icon**  and **remove the wine bottle**.




4: **Place the cleaning bottle** filled with hot or cold water on the lifter and Press the **left icon**.



5: **Place an empty container** under the spout and press the **middle button** .



6: Use the **Brush** to clean the nozzle, **Repeat step 5** until the bottle is empty.

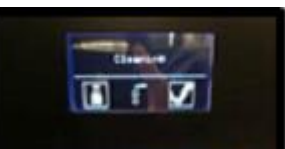

7: Press the **right button**  to confirm the Cleaning process and **remove your cleaning bottle**.



8: **Place your wine bottle** on the lifter, Scroll down,  Select **Back** and Scroll down again to **Move Bottle**. **Remove the TECHNICAL Card**.

Don't forget to record the information in the cleaning chart provided!

